



FP Series

Install Instructions For:
FP-Light


435.647.9555 | 800.647.TUBE | www.soundtube.com

FP modules ship pre-installed from the factory.

Other FP Series optional modules include:

- 1. FP-Motion
- 2. FP-ScentAir
- 3. FP-Amp

All modules require a power source. An optional 15-volt source is available from SoundTube (Model numbers: AC-PS-1530 or AC-PS-1550).

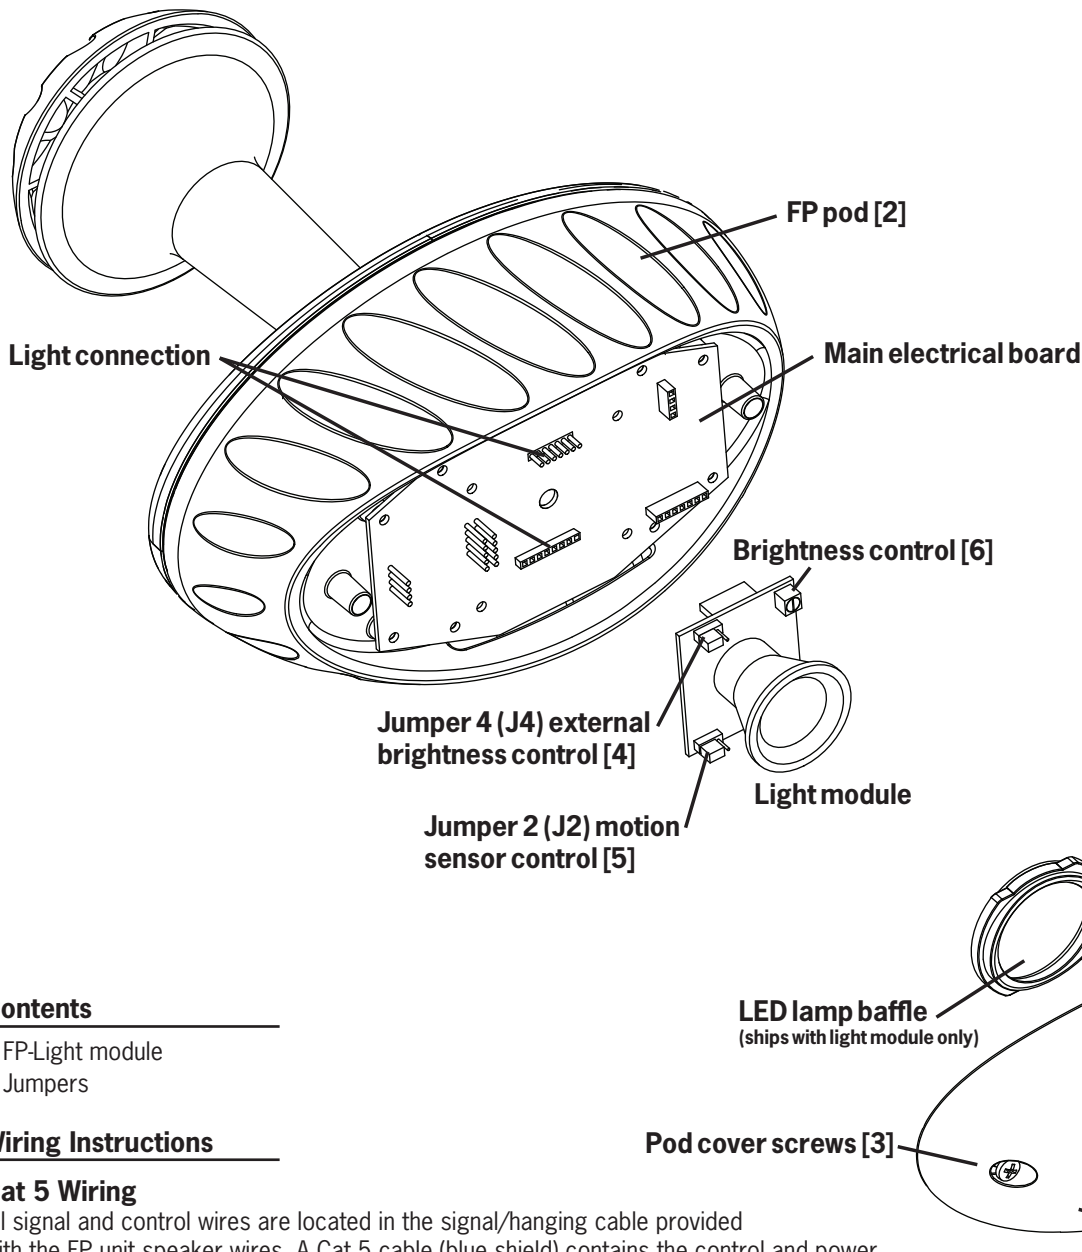

Contents

- 1 FP-Light module
- 2 Jumpers

Wiring Instructions

Cat 5 Wiring

All signal and control wires are located in the signal/hanging cable provided with the FP unit speaker wires. A Cat 5 cable (blue shield) contains the control and power wires; audio wires are individual 16-gauge wires in the bundle.

Power	External Controller	LED Light	Speaker
Power ○ = Brown/White	Contact closure ○ = Green/White	LED control ○ = Orange/White	Left in ○ = White
Power ground ○ = Brown	Contact closure ○ = Green	LED control ○ = Orange	Left in ○ = Green
	12 V trigger ○ = Blue/White	Amp Control	Right in ○ = Red
	12 V trigger ○ = Orange	Amp gain ○ = Blue	Right in ○ = Black
		Amp gain ○ = Orange	

1.435.647.9555 | 800.647.TUBE | www.soundtube.com

FP Series

©2010 SoundTube Entertainment, Inc. All rights reserved. PNINS-FP-LIGHT Rev08.20.10



Warning

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.



Warning

Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.

FP Series

Install Instructions For:
FP-Light

435.647.9555 | 800.647.TUBE | www.soundtube.com

FP-Light |Light Settings and Controls

Module Description

The LED light can operate as a standard light fixture or can be triggered with the FP-Motion module. Brightness can be controlled either internally with an adjustment on the FP-Light module or externally with a global system controller. To trigger the FP-Light with the FP-Motion, refer to Section 3 and the FP-Motion installation instructions.

Section 1 – Wiring The Speaker

Connecting The External Power Supply


The FP-Light requires an external power supply rated between 12 V and 18 V (optional SoundTube accessories: AC-PS-1530 and AC-PS-1550). Connect the power supply to the brown/white (+) and brown (-) wires in the Cat 5 cable.

Section 2 – Adjusting the Brightness

Remove The Pod Cover

Remove the pod cover [1] from the FP pod [2] by loosening the two captured screws [3] on each side (Figure 1). The screws will not come out of the cover.

Figure 1

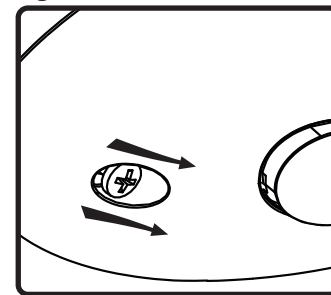


Adjust The Brightness Internally

To manually adjust the brightness of the light use a small screwdriver to turn the trim pot on the upper right corner of the light module [6]. Turning the trim pot clockwise will increase brightness and counterclockwise will decrease brightness.

Adjust The Brightness Externally

The external brightness control is disabled by factory default. To enable the external brightness control, move Jumper 4 [4] on the upper left corner of the FP Light module to the enabled position over the two right pins (Figure 2).

Figure 2

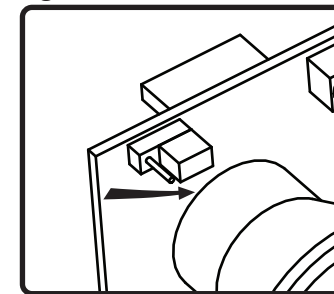

To adjust the brightness externally, incorporate a controller such as Crestron or Lutron and connect the positive lead [+] from the controller to the orange/white wire in the Cat 5, and the negative lead [-] from the controller to the orange wire in the Cat 5. The Light module accepts 0 V to 10 V DC signal to control the brightness. **To achieve maximum brightness, the trim pot must be turned fully clockwise (see previous step).**


Section 3 – Motion Sensor Triggering

Enable The Motion Sensor

Note: To use with motion triggering, both the FP-Light and the FP-Motion modules must be installed.

Since motion sensing is disabled by factory default, the light will be on continuously when power is supplied. To enable motion sensor triggering of the light, move Jumper 2 [5] on the lower left corner of the FP-Light module to the two left pins (Figure 3). When this feature is enabled, the light will only activate when motion is detected. See FP-Motion sensor instructions for settings and controls.

Figure 3

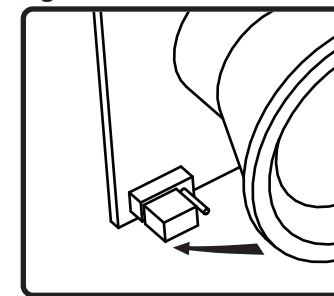

Section 4 – Replacing The Pod Cover

Replace pod cover [1] and tighten screws [3].