



biamp.

Tesira[®]
AMP-450P Amplifier
OPERATION MANUAL



SEPTEMBER 2018

AMP-450P PRODUCT DESCRIPTION

The AMP-450P is a four-channel AVB PoE+ amplifier for use in Tesira® systems. The output channels are software configurable including selectable power versus channel count. PoE+ power allows the AMP-450P to be placed wherever you need it. Suitable for air-handling spaces, the amplifier can be located close to ceiling speakers if desired. The AMP-450P includes an internal limiter and can provide 3W RMS of continuous power to all four channels. The Tesira AMP-450P is also capable of operating in a “burst” mode to support higher power levels for dynamic content for brief periods. The amplifier serves as a dedicated endpoint in a Tesira system, making installations easier to design, support and maintain. The AMP-450P is ideal for Tesira-equipped conference rooms and other applications.



Setup and Use

The Tesira software provides an intuitive interface for setup and programming of the AMP-450P. The information supplied by this manual relates to physical connections and device setup. For more details on software setup, please consult the Tesira Help File. For device specifications please consult the AMP-450P Datasheet.

The Tesira AMP-450P does not connect to Telecom Network Voltage (TNV) circuitry and is considered a Network Environment Zero device.

Front Panel and Connectors

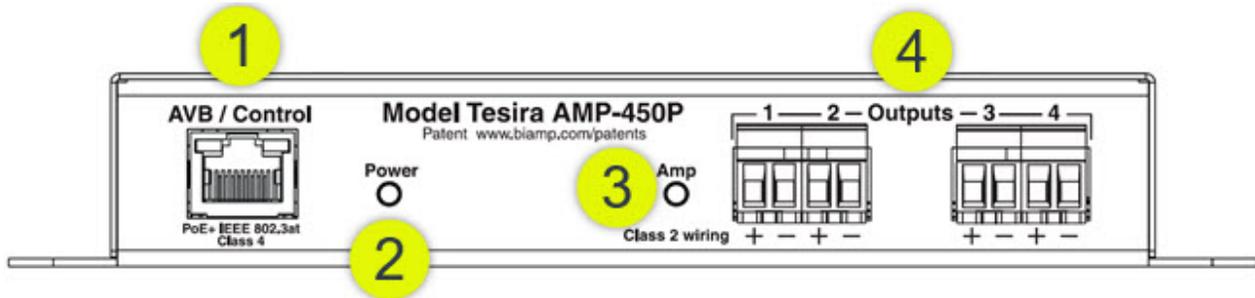


Figure 1 AMP-450P Front Panel

1. AVB / Control

Facilitates connection to the Tesira AVB network for audio and control. This RJ-45 port may either be connected directly to the Tesira AVB port (via a PoE+ injector) for a single device system or via a PoE+ network switch in a multi-device AVB system. IEEE 802.3at Power over Ethernet Plus (PoE+) Class 4 is required as there are no other provisions for power inlet.

2. Power/System Status

A multi-color LED provides information about the status of the device.

Status	LED Indicator
No power	Off
Powered but not ready to receive configuration	Red Solid
Ready to receive configuration or updating firmware	Yellow Solid
Configured and ready to participate in the system	Green Solid
Amplifier is in Locate mode (triggered from the software)	Green Flashing
Unit has Major Alarm condition	Red Flashing
Unit has Minor Alarm condition	Yellow Flashing
Unit has both a Major and Minor Alarm condition	Red & Yellow Flashing

3. Amp Status

A multi-color LED provides information about the status of the amplifier.

Status	LED Indicator
No power	Off
Clip detected	Red Solid
Amplifier limiter engaged	Yellow Solid
Powered	Green Solid
Amplifier is in Locate mode (triggered from the software)	Green Flashing
Amplifier has failed to initialize, an error is present, or the amp is temporarily muted due to an audio burst	Red Flashing
PoE+ power is not available or insufficient to power the amplifier so it has been turned off	Red & Yellow Flashing

4. Output 1 - 4

4 x 3W RMS or 2 x 7W RMS or 1 x 15W RMS output at low impedance 4Ω / 8Ω.

Amplifier Output and Wiring

The amplifier can be configured in either single channel, two-channel or four-channel mode in the Tesira software. Any unconfigured channels will not pass audio even if speakers are connected.

1 x 15W RMS

Channel	Output
1	15W
2	Not Used
3	Not Used
4	Not Used

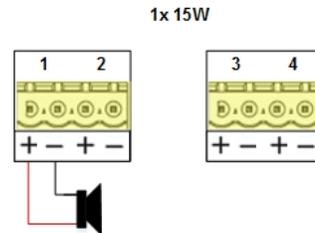


Figure 2 Amplifier Speaker Wiring 1 x 15W RMS

2 x 7W RMS

Channel	Output
1	7W
2	7W
3	Not Used
4	Not Used

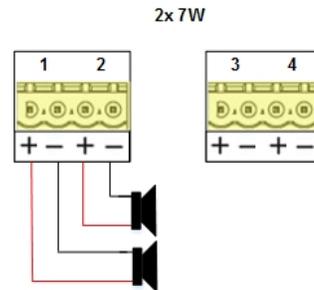


Figure 3 Amplifier Speaker Wiring 2 x 7W RMS

4 x 3W RMS

Channel	Output
1	3W
2	3W
3	3W
4	3W

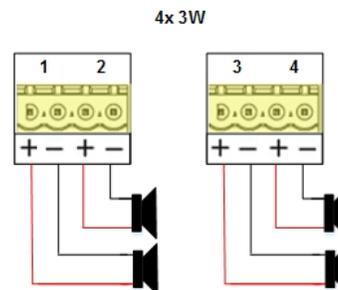


Figure 4 Amplifier Speaker Wiring 4 x 3W RMS

Mounting & Installation

Flanges on each side of the unit have mounting holes to secure the AMP-450P with hardware (not provided) if desired. An optional seismic cable may be installed through the center hole on the left mounting flange in lieu of hardware mounting.

Newer versions of the AMP-450P (Sept 2018 or later) come equipped with clips that can secure the AMP-450P above a ceiling tile to the ceiling "T-bars."

General Mounting and Installation Notes

- 330 feet (100 meters) maximum from the Ethernet switch to the AMP-450P
- Flange pre-drilled for seismic cable installation
- Includes ceiling T-bar mounting clips (x2)

Seismic Cable Installation (optional)

To install the optional seismic cable, place the unit in the desired location:

1. Feed the seismic cable through the hole in AMP-450P mounting flange.



Figure 5 AMP-450P Seismic Cable Mounting

2. Feed the cable through one end of the locking mechanism.

NOTE: The ends indicated by the blue arrow need to be depressed to allow the cable to pass through. Internal guides ensure the cable will be routed through the correct path.

3. Attach the loop to a secure location and apply sufficient tension for minimal slack.

4. Make sure the ends of the lock mechanism are in the locked position (out) as indicated by the blue arrows.

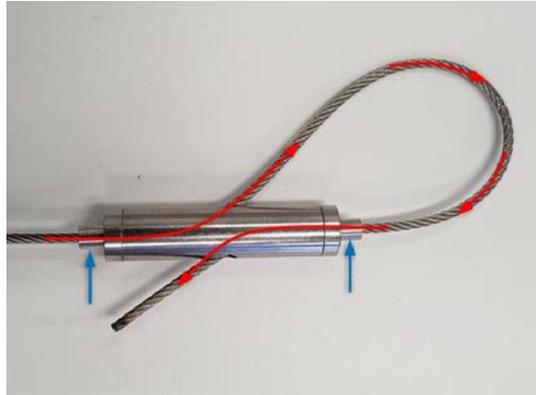


Figure 6 Lock Mechanism Orientation

T-Bar Clip Installation

If using clips to install the AMP-450P above a ceiling tile, do the steps that follow:

1. Remove ceiling tiles adjacent to the mounting location as required for access.
2. Install the clips onto the notched fittings on top of the AMP-450P.
3. Fit the clips over two perpendicular T-bars (in the corner) above the ceiling tile with the AMP-450P oriented as required.

NOTE: If installing a TB-1 tile bridge (typically installed to accommodate TCM or DCM model plenums and microphones) the AMP-450P may be mounted to any edge of the ceiling T-bar and the TB-1. See the TB-1 and/or TCM-1 installation manuals for more information at <https://www.biamp.com/downloads>.

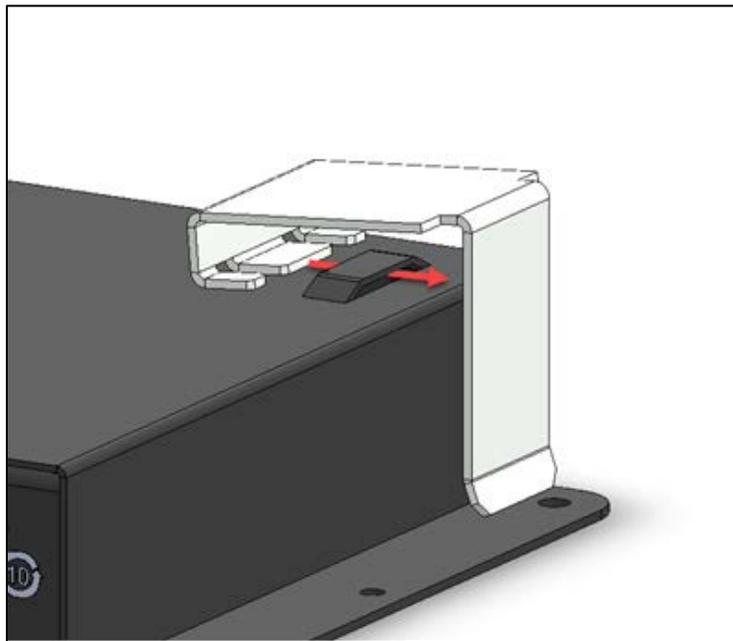


Figure 7 AMP-450P Mounting Clip Installation

FCC Part 15 –

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.